



## PORTA OVEN PRO 40



### ***User Manual***

### ***40L outdoor gas oven stove***

 
 
 
Please read these instructions carefully before using the appliance.  
Always keep this manual in a place where could be seen at any moment.

This manual is for Model: W900

## **CONTENTS**


SPARE PART NAMES .....	1
INSTRUCTIONS .....	2
TROUBLESHOOTING .....	4
EMERGENCY TREATMENT AND PRODUCT SPECIFICATION .....	5
CLEANING AND MAINTENANCE .....	6
SAFETY PRECAUTIONS .....	7
SPEC INFORMATION .....	10

# Spare part names

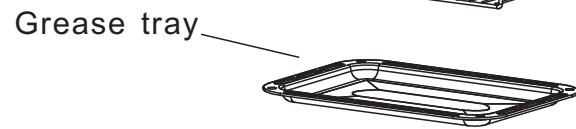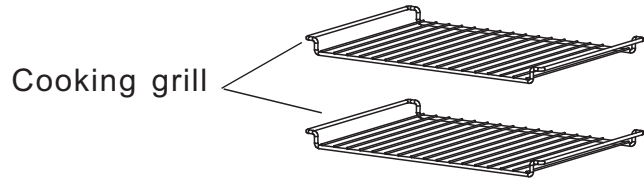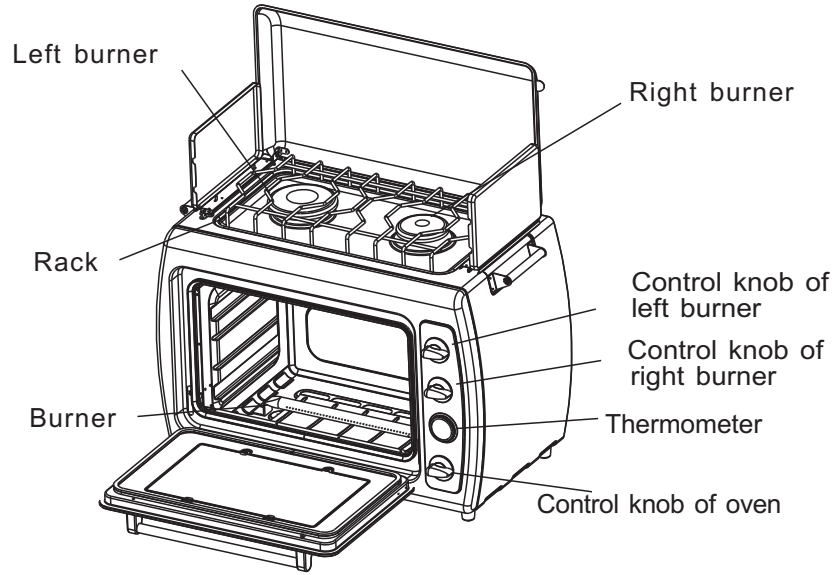

# Instructions
 
## Terms and Conditions

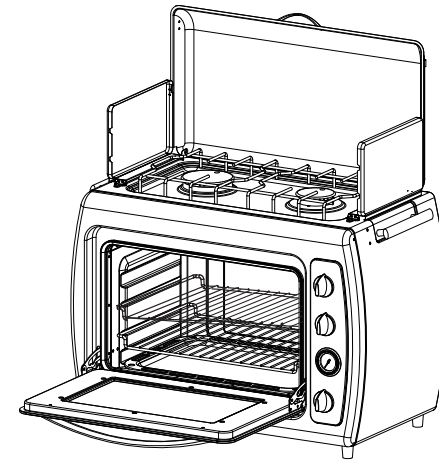

- \* Put the food on the mid-layer, it takes more time but can make the food more delicious!
- \* Use the salt or another marinade cover the meat after a certain time, it tastes better.
- \* This device only can use low pressure butane, propane or LPG, with suitable qualified regulator and hose, the hose should be connect with the device and regulator by hose clips carefully .

### Time for cooking and power of fire (below details is for reference only)

Food	Toast	Hot dog	Pizza	Roast shrimp	Roast fish	Roast duck	Egg -plant	Chicken wing	Spare ribs	Sweet potato
Temperature	Low	High	Medium-high	High	High	High	High	High	High	High
Time	3-5 mins	10-12 mins	20-25 mins	10-15 mins	13-15 mins	30-35 mins	25-30 mins	18-20 mins	18-20 mins	30-35 mins

You can adjust the time, fire, cooking grill's layer as personal interest according to different food.

# Instructions

## Operation step and functions

- 1、 After connect the cylinder, need double confirm there is no leakage, then put the grease tray and cooking grill in the right place.
- 2、 First time use the appliance, should close the door without any food inside, use high fire to cook 5mins, for high temperature disinfection and smell remover.
- 3、 First time use the grease tray, also should use high fire to cook 1min for high temperature disinfection and smell remover.
- 4、 Cooking grill with tinfoil covering is used for cooking spare ribs, chicken wing, chicken, shrimp and vegetable etc.
- 5、 Upper burner is used for making soup, rice, noodles and boil water etc.

## Use tips

- \* As always use the appliance outdoor which need to remove the hose, there is lots of air inside the hose, it lower the ignition success rate. So suggest that pressing the valve of burner for 3~5 seconds to let air out.

## Lighting instruction:

- \* Open the glass door and remove the grease tray, push down the control knob for 3seconds, then turn it anticlockwise to the 90° position, when you saw it is lighting, still keep pushing the knob for 5seconds then leave it. If the burner has not lit, turn the knob 'OFF', and repeat the step above until it is lighting.
- \* If the burner has not lit after 3 attempts, wait 3 minutes and repeat the above steps.
- \* After the burner is lighting, you can adjust the flame by turning the control knob between high and low, this no need to push down the knob.
- \* After using the appliance, turn off the valve of the gas cylinder, then turn off all the control knob after the fire gone.

# Troubleshooting

- If you find any problem of the appliance, please send it to the servicing agent and inform the details and phenomenon.
- Please ask the dealer to complete the purchase date and make the shop's stamp. All guaranty matters are according to the words on the warranty.
- You have to pay the spare parts cost if the damage caused by improper operation or over 1 year from the date of purchasing.

**The below status might not be failure, please check it carefully before send the appliance to servicing agent:**

Exception	Cause analysis	Solution
Failure of ignition ①	The hose contain much air, or cold weather.	Light the upper burner first, then light the oven's, or use the ignition gun.
Failure of ignition ②	Use non-standard, adjustable regulator	Must use the fixed regulator with 28-30mbar
Failure of ignition ③	The gas is impure or with high impurity.	To judge the gas pure or not, you can see the fire. Fire in blue means pure, fire in red means impure.
Temperature rises slowly	Outdoor environment's humidity, temperature are not constant.	Warm up the oven to 200°C before put the food inside, also try to put the oven in a sheltered corner.

# Emergency treatment and product specification

## Emergency treatment

- When using the appliance, if always with smoke or catch fire, please turn it off as soon as possible, also turn off the gas valve, contact with the after sale department soon!
- If the hose of the appliance is damaged, please contact with the after sale department directly. Never modify the device by yourself or another people to avoid any dangerous.

## Specification

Type	W900	
Item		
Left burner power/gas consumption	2.3kw	164g/h
Right burner power/gas consumption	1.5kw	110g/h
Oven burner power/gas consumption	1.5kw	110g/h
Dimension (L x W x H)	63 x 42 x 49(cm)	
Weight	15kgs	
Country of origin	China	
Capacity	40L	

# Cleaning and maintenance

Please cleaning the oven only after the appliance is totally cool.

- Never clean the surface with crocus (detergent), volatile oil, acid-base solvent, these will damage the surface treatment.
- Please use the soft towel to clean the outer body, to avoid the scratch (as photo).



- About the greasy dirt, please use the soft towel with dish detergent to scrub, and must pat dry with dry towel, avoid the rust.
- If there is greasy dirt inside the glass window, is difficult to be cleaned after is dry, you can use the scouring pad to clean it in appropriate intensity, do not too overexert to scratch the glass.

# Safety Precautions(Must follow)





Please be sure to the following items to prevent any harm and property damage accidents for the user and others

- For strengthening emphasize the below details, here will explain more about the below marks:


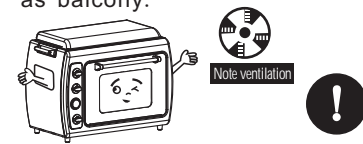
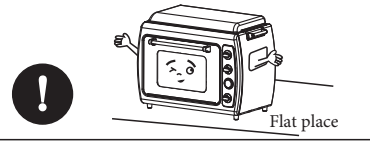
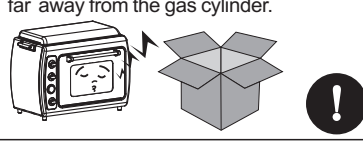
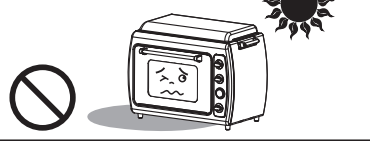
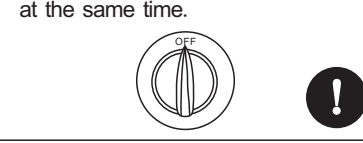
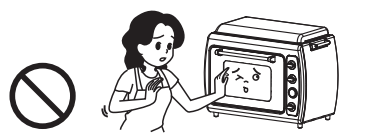
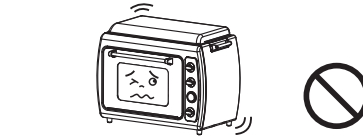
	<b>Warning</b> It means "It might cause death or serious injury"!
	<b>Caution</b> It means "It might cause injury or property damage"!

- For more details, please check the below mark and instruction for reference:

	This symbol means "PROHIBIT"!
	This symbol means "ENFORCE"!
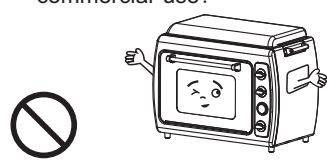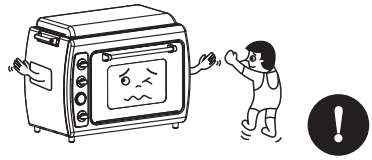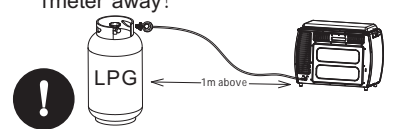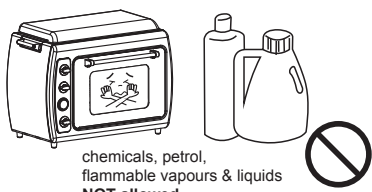
<b>Warning</b>	
<ul style="list-style-type: none"> <li>It will reduce appliance's service life if use it as commercial use!</li> </ul> 	<ul style="list-style-type: none"> <li>Never allow children use this appliance alone!</li> </ul> 
<ul style="list-style-type: none"> <li>Gas type: butane, propane LPG, nature gas. The length of flexible hose shall not exceed 1.5m. In Finland, the length shall not exceed 1.2m, and the gas cylinder should be put at least 1meter away!</li> </ul> 	<ul style="list-style-type: none"> <li>Never clean the device with chemical liquid solvent!</li> </ul>  <p>chemicals, petrol, flammable vapours &amp; liquids <b>NOT</b> allowed</p>



# Safety Precautions(Must follow)
  
<b>Warning</b>	
<ul style="list-style-type: none"> <li>Never store gasoline or other flammable gases or liquids around the appliance.</li> </ul> 	<ul style="list-style-type: none"> <li>Outdoor use only or use in well-ventilated place, such as balcony.</li> </ul> 
<ul style="list-style-type: none"> <li>Never place the appliance on a soft, uneven floor or grass to prevent dumping, it might burn the grass and tree then cause dangerous.</li> </ul>  <p>Flat place</p>	<ul style="list-style-type: none"> <li>When not use the appliance for a long time, please clean it carefully and check if any cause mouldy or rust, then put it into carton. Put the carton on a less moisture place. Ensure put the appliance far away from the gas cylinder.</li> </ul> 
<ul style="list-style-type: none"> <li>When using the appliance outdoor, avoid sun exposure, and avoid the place might have something fall off at any time.</li> </ul> 	<ul style="list-style-type: none"> <li>Be careful when lighting the burner and notice the fire, must turn off the control knob after cooking, and double confirm the fire gone or not at the same time.</li> </ul> 
<ul style="list-style-type: none"> <li>Except the door handle and 2 sides handle, do not touch another place of the appliance when using or just turn off the fire, to avoid any scald.</li> </ul> 	<ul style="list-style-type: none"> <li>Fix the appliance in a safe place when transportation and do not let it throw, remember far away from the gas cylinder.</li> </ul> 

## Safety Precautions(Must follow)

### Warning

- If there is strong smell when using the appliance, please turn off the gas supply and turn off the fire at once, also open the glass window!
- Must use the appliance with country pressure standard and safety standard's qualified regulator and hose, it is very dangerous for using the unqualified regulator and hose.

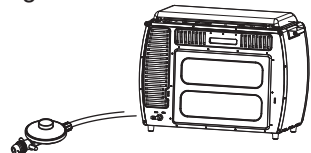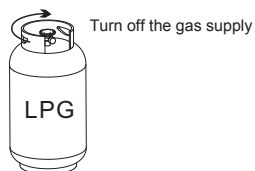


- The first use the appliance, it might have smoke form the inside oven, this is normal and please keep use it!
- Do not use the damaged hose!
- Never place the appliance on a plastic cloth or soft pad material to avoid the fire risk!

**Particular Caution:** When bake toast, do not use high fire for more than 5 minutes, also when cooking meat which has too much fat, do not cook too long time, these food might catch fire!

- Never go away when using the appliance!

All maintenance services are according to the original parts, if use non-original parts on the product and cause any damage, company is not bear any responsibility for 1 year guarantee!

## SPEC INFORMATION

MODEL NO.:	W900				
DESCRIPTION:	PORTA OVEN PRO 40				
TOTAL HEAT INPUT:	5.3 kW (384g/h)		 0359-18 0359CP1423		
GAS CATEGORY:	I <sub>3+</sub> (28-30/37)	I <sub>3B/P</sub> (30)	I <sub>3B/P</sub> (50)		
TYPES OF GAS:	Butane	Propane	LPG GAS MIXTURES		
GAS PRESSURE:	28-30 mbar	37 mbar	30 mbar	50 mbar	37 mbar
INJECTOR SIZE:					
Left hotplate burner:	0.77mm		0.77mm	0.67mm	0.77mm
Right hotplate burner:	0.63mm		0.63mm	0.56mm	0.63mm
Oven burner:	0.59mm		0.82mm	0.54mm	0.59mm
DATA CODE:	P.O.No. 12598				
<b>USE OUTDOORS ONLY.</b>					
<b>READ THE INSTRUCTIONS BEFORE USING THE APPLIANCE.</b>					
<b>WARNING: ACCESSIBLE PARTS MAY BE VERY HOT. KEEP YOUNG CHILDREN AWAY.</b>					
<b>THIS APPLIANCE MUST BE KEPT AWAY FROM FLAMMABLE MATERIALS DURING USE.</b>					
<b>DO NOT MOVE THE APPLIANCE DURING USE.</b>					
<b>TURN OFF THE GAS SUPPLY AT THE GAS CYLINDER AFTER USE.</b>					
<b>DO NOT MODIFY THE APPLIANCE.</b>					
<b>Country of Destination:</b>					
<input checked="" type="checkbox"/> I <sub>3+</sub> (28-30/37): BE, CH, CY, CZ, ES, FR, GB, GR, IE, IT, LT, LU, LV, PT, SK, SI. <input type="checkbox"/> I <sub>3B/P</sub> (30): BE, CY, DK, EE, FI,FR, HU, IT, LT, NL, NO, SE, SI, SK, RO, HR, TR, BG, IS, LU, MT, CZ. <input type="checkbox"/> I <sub>3B/P</sub> (50): AT, CH, DE, SK, CZ. <input type="checkbox"/> I <sub>3B/P</sub> (37): PL.					